

- Plug grill in – it is **ELECTRIC!! DO NOT USE OPEN FLAME!!!!**
- Turn on with the green **ON button**
- Select manual mode or program mode (recommended) by using the **L and R keys** and hitting the green **OK button** to confirm selection.
- If using program mode, use the **L and R keys** to move between choices and the green **OK button** to confirm selection for a series of options for meat kind, type of cut, thickness of meat, and in some cases how well the meat should be cooked.
- Once program is set, the grill will pre-heat.
- Once pre-heated the grill will beep and ask you to place your meat.
- Once the meat has been placed, hit the green **OK button**.
- When the meat needs to be flipped, the grill will beep.
- Once the meat is flipped, hit the green **OK button**.
- Once the meat is ready, the grill will beep.
- To turn off the grill, hit the red **OFF button**.
- Unplug the grill
- Allow grill to cool before using the supplied brush to scrub the grime off of the metal rungs.
- Use a damp paper towel to wipe down metal rungs.
- Please remove the drip tray from the back of the grill and hand wash it with water in your unit and return it to the grill to reduce the build up of grime on the grill over time.
- Recover the grill.